



BRIEF INFORMATION

Remote Jump Start System

- → High capacity jump-start connectors for Mining equipment
- → Ideal for use where access to terminals is restricted or dangerous
- → Eliminates chance of cross polarity connections through the specially shaped plug
- ightarrow Reduces chance of sparking and possible ignition of flammable materials

RANGE OVERVIEW

Description	Part Number	1)	9		2)
Jump Start Plug		30			
1) Jump Start Plug: high impact ABS Plastic. Copper (silver brass coated) Terminals.	8JA 177 305-101	9			
Suitable for 70 mm ² Cable. Connection via crimpir process.	ng and soldering	4)		5)	-
Jump Start Terminal					
Jump Start Terminal: Removes risk of terminal crossing, high impact ABS plastic, zinc coated terminals.	8JB 177 305-001				
3) Terminal Kit: Kit of jump start terminal, bracket and cap.	8HG 177 305-031	Dim	nensional Ske	tches	
4) Terminal Bracket: Bracket for mounting jump start terminal to vehicle body.	8HG 177 305-021			68	
5) Terminal Cap: Cap to protect terminal from external environment when not in use.	9HD 177 305-011	54			78