



Aanvullingen en wijzigingen in de softwareversie 65

Funcities naar fabrikanten

Deze lijst biedt slechts een algemeen overzicht van de uitbreidingen die met deze versie worden aangeboden. Een complete lijst met alle uitbreidingen van elk model van elke fabrikant zou hier veel te omvangrijk zijn.

Uitgebreide en opnieuw bewerkte fabrikanten

AJP

- | **Foutcode** (Adventure, PR7 650 E4), (Enduro, PR5 250)
- | **Parameter** (Adventure, PR7 650 E4), (Enduro, PR5 250)
- | **Actuator**
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**

Aprilia

- | **Foutcode** (RS, RS 125 E5), (Shiver, Shiver SL 900 Navi), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
- | **Parameter** (Dorsoduro, Dorsoduro 900), (RS, RS 125 E5), (RSV, RSV 4 1100 Factory), (Shiver, Shiver SL 900 Navi), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
- | **Actuator** (RS, RS 125 E5), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
- | **Basisinstelling** Onderstel inleren ((RSV, RSV 4 1100 Factory), (Tuono, Tuono 1100 Factory))
Gasklep inleren ((RS, RS 125 E5))
Alle motorleerwaarden resetten ((SXR, SXR 50 E5), (SXR, SXR 160 E5), (RS, RS 125 E5))
Motor-ECU inleren ((RS, RS 125 E5))
- | **Codering**
- | **Service resetten** (Tuono, Tuono V4 1100)



Motorcycle-diagnose

Benelli

- | **Foutcode** (BN, BN125), (BN, BN251), (BN, BN302), (BN, BN302 R), (BN, BN600 GT), (BN, BN600 R), (BN, BN600i), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (TNT, TNT 125), (Tornado, Tornado Naked T125), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
- | **Parameter** (BN, BN125), (BN, BN251), (BN, BN302), (BN, BN302 R), (BN, BN600 GT), (BN, BN600 R), (BN, BN600i), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (TNT, TNT 125), (Tornado, Tornado Naked T125), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
- | **Actuator** (BN, BN251), (BN, BN302), (BN, BN302 R), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
- | **Basisinstelling** Remsysteem ontlichten ((BN, BN251), (BN, BN302), (BN, BN302 R), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 752 S), (Naked, 502 C), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X), (Classic, Imperiale 400))
- | **Codering**
- | **Service resetten**

BMW

- | **Foutcode** (C 650, C 650 Sport), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (HP 2, HP 2 Enduro), (K 1, K 1 - 4V), (K 100, K 100 RS 4V), (K 1100, K 1100 LT), (K 1100, K 1100 RS), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1600, K 1600 B), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (R 1150, R 1150 R), (R 1150, R 1150 R Rockster), (R 1150, R 1150 RS), (R 1150, R 1150 RT), (R 1200, R 1200 C), (R 1200, R 1200 CL), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (R 1250, R 1250 GS), (R 1250, R 1250 GS Adventure), (R 1250, R 1250 RT), (R 850, R 850 R), (R 850, R 850 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 XR)
- | **Parameter** (C 650, C 650 Sport), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (HP 2, HP 2 Enduro), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1600, K 1600 B), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (R 1150, R 1150 R), (R 1150, R 1150 R Rockster), (R 1150, R 1150 RS), (R 1150, R 1150 RT), (R 1200, R 1200 C), (R 1200, R 1200 CL), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (R 1250, R 1250 GS), (R 1250, R 1250 GS Adventure), (R 1250, R 1250 RT), (R 850, R 850 R), (R 850, R 850 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 XR)
- | **Actuator** (C 650, C 650 Sport), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (nineT, R nineT), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR)



Motorcycle-diagnose

Basisinstelling

Hydraulische eenheid ABS vóór ontluichten ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 700, F 700 GS), (G, G 310 R), (S 1000, S 1000 RR), (S 1000, S 1000 R), (F 800, F 800 R), (S 1000, S 1000 XR), (nineT, R nineT), (K 1600, K 1600 GT), (G, G 310 GS), (C 650, C 650 GT), (G, G 650 GS Sertao), (K 1600, K 1600 GTL), (K 1600, K 1600 B))

CAN-bus activeren ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure))

Stationair-Adaptie ((F 800, F 800 S), (F 800, F 800 ST), (F 800, F 800 GS), (F 800, F 800 R), (F 800, F 800 GT), (F 800, F 800 GS Adventure), (F 650, F 650 GS))

Dynamische onderstelregeling inleren ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure))

Windscherm inleren ((R 1200, R 1200 RT))

Leerwaarden gasklep resetten ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS))

Gasklepsensor inleren ((R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (K 1200, K 1200 RS), (R 1200, R 1200 C), (K 1, K 1 - 4V), (K 100, K 100 RS 4V), (K 1100, K 1100 LT), (K 1100, K 1100 RS))

Gasklep inleren ((C 650, C 650 Sport))

Hydraulische eenheid ABS vóór ontluichten ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 700, F 700 GS), (G, G 310 R), (S 1000, S 1000 RR), (S 1000, S 1000 R), (F 800, F 800 R), (S 1000, S 1000 XR), (nineT, R nineT), (K 1600, K 1600 GT), (G, G 310 GS), (G, G 650 GS Sertao), (K 1600, K 1600 GTL), (K 1600, K 1600 B))

Leerwaarden resetten ((F 700, F 700 GS), (F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 R))

Voertuigniveausensor dynamische onderstelregeling inleren ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure))

RDC-sensoren (bandenspanningssensoren) inleren ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 RT), (F 800, F 800 R), (F 700, F 700 GS), (F 800, F 800 GS))

Codering

Service resetten

(C 600, C 600 Sport), (C 650, C 650 GT), (C evolution, C evolution), (F 650, F 650 GS), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (F 800, F 800 S), (F 800, F 800 ST), (G, G 650 Xmoto), (HP 2, HP 2 Enduro), (HP 2, HP 2 Megamoto), (HP 2, HP 2 Sport), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1300, K 1300 GT), (K 1300, K 1300 R), (K 1300, K 1300 S), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 RR HP4), (S 1000, S 1000 XR)

Brixton

Foutcode

(BX, BX 125), (BX, BX 125 Haycroft), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 125 XS), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Rayburn, Rayburn 125), (Sunray, Sunray 125)

Parameter

(BX, BX 125), (BX, BX 125 Haycroft), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 125 XS), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Rayburn, Rayburn 125), (Sunray, Sunray 125)



Motorcycle-diagnose

| **Actuator** (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Sunray, Sunray 125)

| **Basisinstelling** Remsysteem ontlichten ((Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 125), (Felsberg, Felsberg 250), (Crossfire, Crossfire 500), (Sunray, Sunray 125), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250))

| **Codering**

| **Service resetten**

CFMOTO

| **Foutcode** (250, 250 NK), (400, 400 NK), (650, 650 MT)

| **Parameter** (250, 250 NK), (400, 400 NK), (650, 650 MT)

| **Actuator** (250, 250 NK), (400, 400 NK), (650, 650 MT)

| **Basisinstelling**

| **Codering**

| **Service resetten**

Ducati

| **Foutcode**

| **Parameter**

| **Actuator**

| **Basisinstelling**

| **Codering** Schakelautomaat activeren/deactiveren ((Superbike, Panigale V2))
Diefstal-alarminstallatie activeren/deactiveren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))
Dagrijverlichting activeren/deactiveren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))
Handgrepen met verwarming deactiveren/activeren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))

| **Service resetten** (Hypermotard, 950 Hypermotard SP), (Monster, M 1000 DS), (Monster, M 1000 S4 R), (Monster, M 800), (Monster, M S4), (Multistrada, MTS 1000), (Sport Touring, ST 4), (Sport Touring, ST 4 S), (Sport Touring, ST 4 S ABS), (Super Sport, 1000 SS DS), (Superbike, 1199 Panigale), (Superbike, 1199 Panigale R), (Superbike, 1199 Panigale S)



Motorcycle-diagnose

F.B Mondial

- | **Foutcode** (125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
- | **Parameter** (125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
- | **Actuator** (125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
- | **Basisinstelling**
Remsysteem ontlichten ((300, HPS 300), (300, Sport Classic 300))
Gasklep inleren ((125, HPS 125), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS))
Hydraulische eenheid ABS ontlichten ((125, HPS 125 E5), (125, Sport Classic 125 ABS))
- | **Codering**
- | **Service resetten**

Fantic

- | **Foutcode** (Caballero, Flat Track 125), (Caballero, Scrambler 125)
- | **Parameter** (Caballero, Flat Track 125), (Caballero, Scrambler 125)
- | **Actuator** (Caballero, Flat Track 125), (Caballero, Scrambler 125)
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**

Generic

- | **Foutcode** (125, TR 125 Enduro), (125, TR 125 Supermoto)
- | **Parameter** (125, TR 125 Enduro), (125, TR 125 Supermoto)
- | **Actuator**
- | **Basisinstelling**



Motorcycle-diagnose

| **Codering**

| **Service resetten**

Harley-Davidson

| **Foutcode**

(CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96), (Trike, 1745)

| **Parameter**

(CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96)

| **Actuator**

(CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96)

| **Basisinstelling**

Leerwaarden lambda-sonde resetten ((VRSC, 1250), (Sportster, 883), (Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Hydraulische eenheid ABS vóór ontluchten ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Alle motorleerwaarden resetten ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Hydraulische eenheid ABS vóór ontluchten ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))



Motorcycle-diagnose

| Codering

Stationairtoerental coderen ((Softail, Twin Cam 88), (Dyna, Twin Cam 88), (Touring, Twin Cam 88))

Uitlaatgasklep deactiveren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Cruisecontrol activeren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Cruisecontrol deactiveren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Uitlaatgasklep activeren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

| Service resetten

Hisun Quad

| Foutcode

(ATV, Tactic 550)

| Parameter

(ATV, Tactic 550)

| Actuator

| Basisinstelling

| Codering

| Service resetten

Hyosung

| Foutcode

(GT, GT 650i /iR), (ST, ST 700i)

| Parameter

(GT, GT 650i /iR), (ST, ST 700i)

| Actuator

| Basisinstelling

| Codering

| Service resetten



Motorcycle-diagnose

Kawasaki

- | **Foutcode** (ER, ER-6f), (ER, ER-6n), (GTR, GTR-1400), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (Versys, Versys-650), (Z, Z-1000), (Z, Z-1000 SX), (Z, Z-750), (Z, Z-750 R), (Z, Z-800), (ZX, ZX-10 R), (ZZR, ZZR-1400)
- | **Parameter** (ER, ER-6f), (ER, ER-6n), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (Z, Z-1000), (Z, Z-750), (ZX, ZX-10 R)
- | **Actuator** (ER, ER-6f), (ER, ER-6n), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (ZX, ZX-10 R)
- | **Basisinstelling** Hydraulische eenheid ABS vóór ontluichten ((Ninja, Ninja 1000 SX), (Versys, Versys-1000))
Hydraulische eenheid ABS vóór ontluichten ((Ninja, Ninja 1000 SX), (Versys, Versys-1000))
- | **Codering**
- | **Service resetten** (H2, H2R), (H2, Ninja H2 SX), (H2, ZH2), (H2, ZH2 SE), (Ninja, Ninja 1000 SX), (Ninja, Ninja 650), (Versys, Versys-1000), (Versys, Versys-650), (Z, Z-400), (Z, Z-650), (Z, Z-900)

Keeway

- | **Foutcode** (125, Cityblade 125), (125, K-Light 125), (125, Logik 125), (125, RKF 125), (125, RKR 125), (125, RKS 125), (125, RKS 125 Sport), (125, RKV 125), (125, Superlight 125), (125, TX 125 Motard), (125, Vieste 125), (125, Zahara 125), (300, Vieste 300), (50, F-ACT Evo 50), (600, KR6 600)
- | **Parameter** (125, Cityblade 125), (125, K-Light 125), (125, Logik 125), (125, RKF 125), (125, RKR 125), (125, RKS 125), (125, RKS 125 Sport), (125, RKV 125), (125, Superlight 125), (125, TX 125 Motard), (125, Vieste 125), (125, Zahara 125), (300, Vieste 300), (50, F-ACT Evo 50), (600, KR6 600)
- | **Actuator** (300, Vieste 300)
- | **Basisinstelling** Remsysteem ontluichten ((300, Vieste 300))
- | **Codering**
- | **Service resetten**

KSR Motors

- | **Foutcode** (125, GRS 125), (125, TR 125)
- | **Parameter** (125, TR 125)
- | **Actuator**
- | **Basisinstelling**



Motorcycle-diagnose

| Codering

| Service resetten

KTM

| Foutcode (1190, 1190 RC8), (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)

| Parameter (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)

| Actuator (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)

| Basisinstelling
Versnellingsactuator van transmissie in neutraalpositie brengen ((1290, 1290 Super Duke GT))
Leerwaarden motor resetten ((1290, 1290 Super Duke GT), (300, 300 EXC), (250, 250 EXC))
Oliepomp ontlichten ((300, 300 EXC), (250, 250 EXC))
Remsysteem ontlichten ((390, 390 Adventure), (890, 890 Duke R))
Hydraulische eenheid ABS ontlichten ((990, 990 Supermoto))
Hellingshoeksensor inleren ((390, 390 Adventure), (890, 890 Duke R))

| Codering

| Service resetten

Kymco

| Foutcode (Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility Carry 50), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (Agility, Agility R16 Plus 50), (AK, AK 550i ABS), (Downtown, Downtown 350i), (DT, DT X360), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (People, People S 50), (Super 8, Super 8 50), (Visar, Visar 125), (X-Town, X-Town 300), (X-Town, X-Town 300 City)

| Parameter (Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility Carry 50), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (Agility, Agility R16 Plus 50), (AK, AK 550i ABS), (Downtown, Downtown 350i), (DT, DT X360), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (People, People S 50), (Super 8, Super 8 50), (Visar, Visar 125), (X-Town, X-Town 300), (X-Town, X-Town 300 City)

| Actuator



Motorcycle-diagnose

| Basisinstelling

Leerwaarden stationairregelaar resetten ((Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 50), (Agility, Agility Carry 50), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 50))

Hydraulische eenheid ABS vóór ontluchten ((Downtown, Downtown 350i), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (AK, AK 550i ABS), (DT, DT X360), (Like, Like 150), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (X-Town, X-Town 300), (X-Town, X-Town 300 City))

Hydraulische eenheid ABS vóór ontluchten ((Downtown, Downtown 350i), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (AK, AK 550i ABS), (DT, DT X360), (Like, Like 150), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (X-Town, X-Town 300), (X-Town, X-Town 300 City))

| Codering

| Service resetten

Mash

| Foutcode (125, Black Seven), (250, Two Fifty), (400, Five Hundred)

| Parameter (125, Black Seven), (250, Two Fifty), (400, Five Hundred)

| Actuator

| Basisinstelling

| Codering

| Service resetten

MH

| Foutcode (125, Bogga 125), (125, Bogga Rocker 125), (125, MHX 125), (125, NKR 125), (125, Revenge Bravo Edition 125), (125, Revenge Classic 125), (125, RYX125), (125, Vince 125)

| Parameter (125, Bogga 125), (125, Bogga Rocker 125), (125, MHX 125), (125, RYX125), (125, Vince 125)

| Actuator

| Basisinstelling

| Codering

| Service resetten



Motorcycle-diagnose

Moto Guzzi

- | Foutcode
- | Parameter
- | Actuator
- | Basisinstelling
- | Codering
- | Service resetten (V85, V85 850), (V85, V85 850 Enduro E5)

MV Agusta

- | Foutcode (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Parameter (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Actuator (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Basisinstelling Leerwaarden gasklep resetten ((F3, F3 675), (F3, F3 800), (F4, F4 1000 R), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 Dragster RC), (F3, F3 675 RC), (F3, F3 800 RC), (Turismo, Turismo Veloce 800 Lusso), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 Dragster RR RVS),



Motorcycle-diagnose

(Brutale, Brutale Dragster 800 Rosso), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 SCS), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso))

Uitlaatgasklep inleren ((F3, F3 675), (F3, F3 800), (F4, F4 1000 R), (Brutale, Brutale 800 Dragster RC), (F3, F3 675 RC), (F3, F3 800 RC), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 SCS), (Stradale, Stradale Superveloce 800))

Leerwaarden motor resetten ((F3, F3 800), (Rivale, Rivale 800), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800 RC), (Turismo, Turismo Veloce 800 Lusso), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso))

Alle motorleerwaarden resetten ((F3, F3 675), (F4, F4 1000 R), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale Dragster 800 Rosso), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 SCS))

Gasklep inleren ((Rivale, Rivale 800))

| Codering

| Service resetten

(Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale Dragster 800 Rosso), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 Rosso)

Piaggio

| Foutcode

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Parameter

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Actuator

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Basisinstelling

Hydraulische eenheid ABS vóór ontluchten ((MP 3, MP 3 400 E5))

Hydraulische eenheid ABS vóór ontluchten ((MP 3, MP 3 400 E5))

Alle motorleerwaarden resetten ((MP 3, MP 3 400 E5), (Zip, Zip 50 E5))

Onderstelparameters resetten ((MP 3, MP 3 300 HPE E4))

| Codering

| Service resetten



Motorcycle-diagnose

Quadro

- | **Foutcode** (Qooder, Qooder), (Quadro, Quadro 3), (Quadro, Quadro 350 S), (Quadro, Quadro 4), (Quadro, Quadro S), (QV, QV3)
- | **Parameter** (Qooder, Qooder), (Quadro, Quadro 3), (Quadro, Quadro 350 S), (Quadro, Quadro 4), (Quadro, Quadro S), (QV, QV3)
- | **Actuator**
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**

Shineray

- | **Foutcode** (XY, XY 400)
- | **Parameter** (XY, XY 400)
- | **Actuator**
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**

Stels

- | **Foutcode** (Trigger, Trigger 125)
- | **Parameter** (Trigger, Trigger 125)
- | **Actuator**
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**



Motorcycle-diagnose

Suzuki

- | **Foutcode** (DL, DL-1050), (GSX, GSX-1300 Hayabusa)
- | **Parameter** (DL, DL-1050), (GSX, GSX-1300 Hayabusa)
- | **Actuator** (GSX, GSX-1300 Hayabusa)
- | **Basisinstelling** Leerwaarden stationairregelaar resetten ((GSX, GSX-1300 Hayabusa))
Leerwaarden gasklep resetten ((GSX, GSX-1300 Hayabusa))
Hydraulische eenheid ABS vóór ontluichten ((DL, DL-1050))
ECU resetten ((GSX, GSX-1300 Hayabusa))
Hydraulische eenheid ABS vóór ontluichten ((DL, DL-1050))
- | **Codering**
- | **Service resetten**

SWM

- | **Foutcode** (Ace of Spades, Ace of Spades 125), (Ace of Spades, Ace of Spades 440), (Outlaw, Outlaw 125), (Outlaw, Outlaw 440), (RS, RS 125 R), (RS, RS 300 R), (RS, RS 500 R), (SMR, SMR 125 R), (Superdual, Superdual 650)
- | **Parameter** (Ace of Spades, Ace of Spades 125), (Ace of Spades, Ace of Spades 440), (Outlaw, Outlaw 125), (Outlaw, Outlaw 440), (RS, RS 125 R), (RS, RS 300 R), (RS, RS 500 R), (SMR, SMR 125 R), (Superdual, Superdual 650)
- | **Actuator**
- | **Basisinstelling**
- | **Codering**
- | **Service resetten**

Triumph

- | **Foutcode** (ab 2016, 1. Motor digital)
- | **Parameter** (ab 2016, 1. Motor digital)
- | **Actuator**
- | **Basisinstelling**



Motorcycle-diagnose

| **Codering**

| **Service resetten**

Verve Moto

| **Foutcode** (Classic, Classic S 125), (Classic, Classic S 250), (Tracker, Tracker 250)

| **Parameter** (Classic, Classic S 125), (Classic, Classic S 250), (Tracker, Tracker 250)

| **Actuator**

| **Basisinstelling**

| **Codering**

| **Service resetten**

Vespa

| **Foutcode** (946, 946 125 E5), (946, 946 150 E5), (GTS, GTS 300 ie), (GTV, GTV 300 E4)

| **Parameter** (946, 946 125 E5), (946, 946 150 E5), (GTS, GTS 300 ie), (GTV, GTV 300 E4)

| **Actuator** (946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4)

| **Basisinstelling** Gasklep inleren ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))
Hydraulische eenheid ABS vóór ontlichten ((GTV, GTV 300 E4))
Alle motorleerwaarden resetten ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))
Hydraulische eenheid ABS vóór ontlichten ((GTV, GTV 300 E4))
Motor-ECU inleren ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))

| **Codering**

| **Service resetten**

Wottan

| **Foutcode** (Storm, Storm 125)

| **Parameter** (Storm, Storm 125)

| **Actuator**

| **Basisinstelling**



Motorcycle-diagnose

| Codering

| Service resetten

Yamaha

| **Foutcode** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Parameter** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Actuator** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Basisinstelling**
Leerwaarden stationairregelaar resetten ((YZF, YZF-R1), (Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03), (MT, MT-10))
Leerwaarden motor resetten ((Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03), (MT, MT-10))
Hydraulische eenheid ABS ontlichten ((Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03))

| Codering

| Service resetten