

# Opel Astra J - Ladekontrollampen blinker | HELLA

Opel Astra J Årgang: fra 2012 Stelnr.: WLOPD6EB2CG000351 – WLOPD8ED5C8000092 – WLOPD6EB0C1000612 – Ladekontrollampen blinker For ovennævnte modeller klages over, at ladekontrollampen blinker. Årsagen kan være en aktiveret logistik-modus. I alle Astra J (fra og med årgang 2012) aktiveres logistik-modus på fabrikken inden levering. Fabrik Gliwice (PL) 16.08.2011 fra stelnr.: WLOPD6EB2CG000351 Fabrik Ellesmere Port (UK) 30.08.2011 fra stelnr.: WLOPD8ED5C8000092 Fabrik Rüsselsheim (DE) 30.08.2011 fra stelnr.: WLOPD6EB0C1000612 Logistik-modus er aktiveret, når:- der i DIC (Driver Information Center) (fig. 1) vises meddelelsen "LOGISTIK-MODUS EIN". eller- ladekontrollampen blinker, når motoren er i gang. Info: Når logistik-modus er aktiveret, er tyverialarmen frakoblet, og strømforbruget for BCM (Body Control Module) er reduceret. Logistik-modus aktiveres hhv. deaktiveres således: Deaktivering:- Start motoren.- Tænd havariblinket.- Drej tændingsnøglen i ca. 20 sekunder, mens motoren er i gang (starteren kører ikke) til position "Start motor".- Alt efter udstyrsvariant vises meddelelsen "Logistik-Modus aus" og/ eller ladekontrollampen ophører med at blinke. (Fig. 2)- Sluk havariblinket, og stop motoren. Aktivering:- Start motoren.- Tænd havariblinket.- Drej tændingsnøglen i ca. 20 sekunder, mens motoren er i gang (starteren kører ikke) til position "Start motor".- Alt efter udstyrsvariant vises meddelelsen "Logistik-Modus ein"

**og/eller ladekontrollampen begynder at blinke. (Fig. 3)- Sluk havariblinket, og stop motoren.Fig. 1Fig. 2Fig. 3**

## **Astra J**

**Model year: from 2012 onwards**

**Chassis no.: WLOPD6EB2CG000351 –**

**WLOPD8ED5C8000092 –**

**WLOPD6EB0C1000612 –**

## **Charge signal lamp flashes**

A complaint has been made that the charge signal lamp flashes in the vehicles specified above.

An activated logistics mode can be responsible for this problem.

On all Astra J (from model year 2012), the logistics mode is activated ex-factory before being supplied.

Production facility Gliwice (PL)

8/16/2011 from chassis no.: WLOPD6EB2CG000351

Production facility Ellesmere Port (UK)

8/30/2011 from chassis no.: WLOPD8ED5C8000092

Production facility Rüsselsheim (DE)

8/30/2011 from chassis no.: WLOPD6EB0C1000612

The logistics mode is activated when:

- message in DIC (Driver Information Center) (Figure 1) "LOGISTIC-MODE ON".

or

- the charge signal lamp flashes when the engine is running.

Info:

When the logistics mode is activated, the alarm control system is switched off and the current consumption of the BCM (Body Control Module) is reduced.

To deactivate or activate the logistics mode, proceed as described in the following.

Deactivation:

- Start the engine.
- Switch on the hazard warning lights.
- With the engine running (the starter is not also running), turn the ignition key to the position "Start engine" for approx. 20 seconds.
- Depending on the equipment version, the message "Logistics mode off" appears and / or the battery display stops flashing. (Figure 2)
- Switch off the hazard warning lights and the engine.

Activation:

- Start the engine.
- Switch on the hazard warning lights.
- With the engine running (the starter is not also running), turn the ignition key to the position "Start engine" for approx. 20 seconds.
- Depending on the equipment version, the message "Logistics mode on" appears and / or the battery display flashes. (Figure 3)
- Switch off the hazard warning lights and the engine.

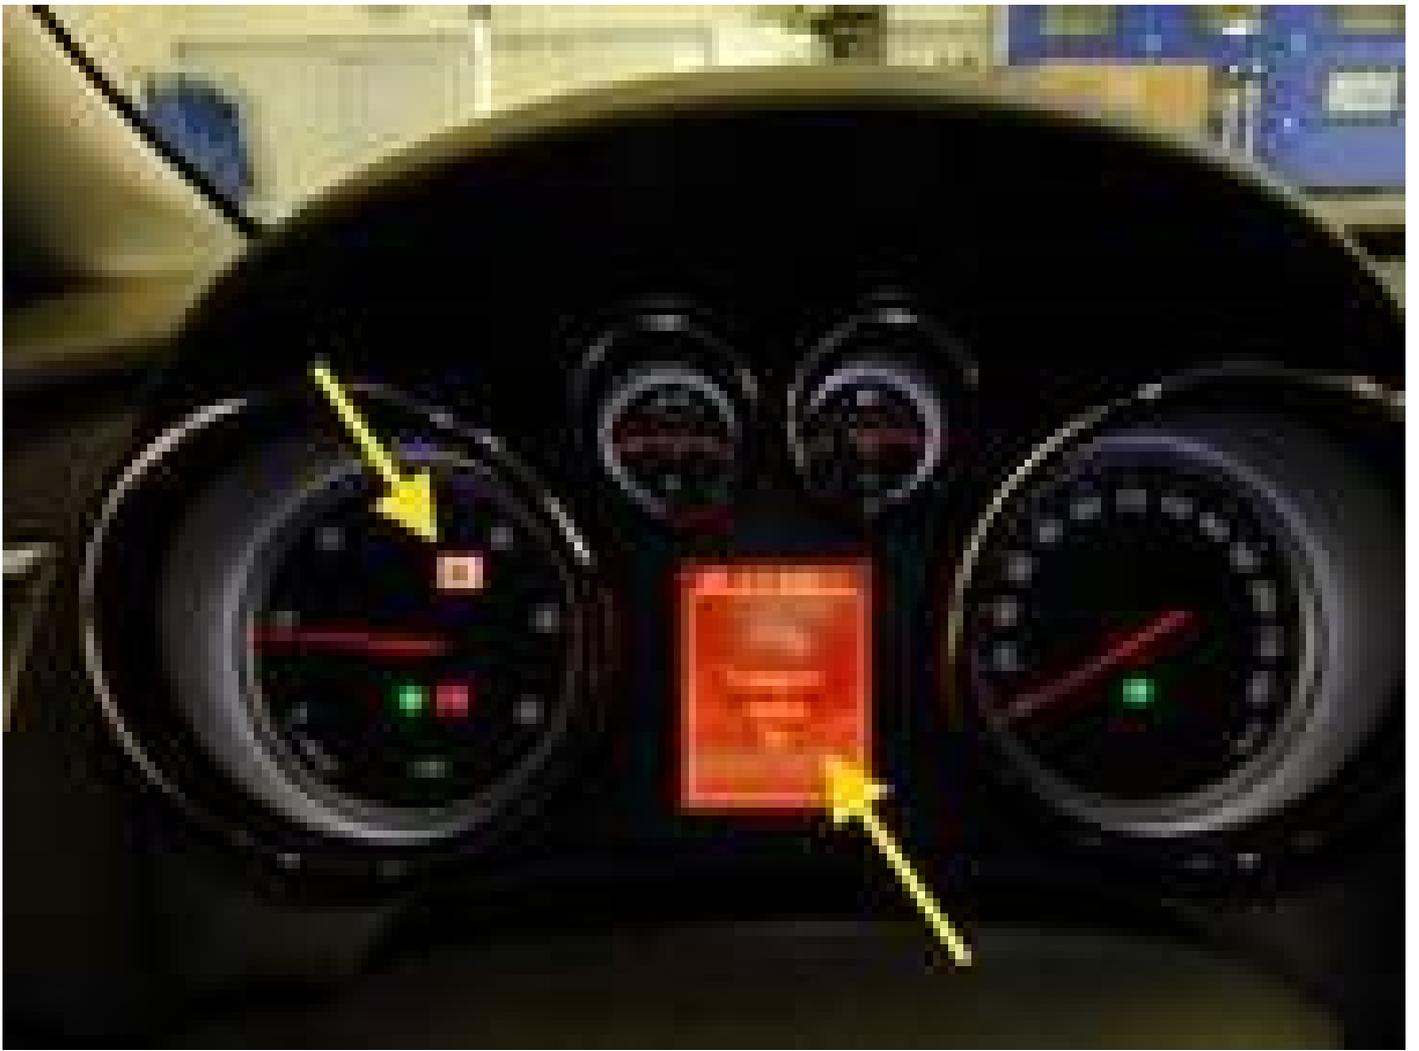


Figure 1



Figure 2



Figure 3