

Mercedes - Benz - Fari allo xeno | HELLA

Mercedes - Benz

Lampada allo xeno con accenditore integrato

Lettura/reset del contatore di funzionamento

In alcune varianti, le informazioni sui minuti di funzionamento dei proiettori allo xeno sono memorizzate nel modulo di alimentazione della lampada frontale allo xeno.

Rimedio:

Prima di sostituire la lampada allo xeno, è necessario leggere i minuti di funzionamento. Queste informazioni possono essere lette utilizzando un dispositivo diagnostico adeguato.

Dopo la sostituzione, il contatore di funzionamento deve essere resettato. (Fig. 1).

Raccomandazione:

- Sostituire i dispositivi luminosi a coppie

 Home	 Diagnostics
Function:	Connection help
Basic setting	 Voltage: --- V
Assembly:	 Make sure: ► Connect suitable char
Resetting the counter for head	 c plu c cor
Actuating the installation/removal position of the parking brake	 icati
Initializing the adaptive cruise control	 sec. -
Resetting the counter for headlight operating hours	 n.
Resetting the counter for headlight cooling fan operating hours	
Learning the power windows	
Adjusting the headlights	

Esempio: (Fig.1)

Hella-Gutmann mega macs

Fig.1