



# Volkswagen Fox - vehicle battery discharged

Data sheet	
Manufacturer	Volkswagen
Vehicle model	FOX
Engine	1.2i
Engine code	CHFB
Year of manufacture	2005 to 2011
Symptoms	Vehicle battery discharged, engine cannot be started
Recommended HGS tool	megamacsX

## Important safety information

## Battery of vehicle electrical system is not being charged because of a defective earth cable

With the above-mentioned vehicle type, it is possible that the vehicle electrical system battery is completely discharged and it is no longer possible to start the engine. If the above-mentioned fault arises, a possible cause could be a faulty earth cable.

Loose or oxidised earth connections often cause malfunctions in electrical and electronic components, especially in components outside the vehicle interior. A defect in the vehicle earth, for example because of a heavily oxidised earth cable, can result in the alternator not charging the vehicle electrical system battery sufficiently, causing the latter to discharge even when the engine is running as a result of the consumers being switched on.

In the course of further troubleshooting, the voltage generated by the alternator under load, i.e. with consumers such as high beam, rear window heating and seat heating switched on, should be checked with a suitable measuring device.

To this end, the positive terminal of the measuring device can be connected to the positive terminal of the alternator and the negative terminal to the negative terminal of the vehicle electrical system battery. Approx. 14 V should be measurable here. Then connect the earth terminal of the measuring device to the housing of the alternator and the positive terminal to the battery positive terminal. Approx. 14 V should also be measurable here. If significantly lower voltages, for example 12.8 V, are measured during the latter measurement, this may indicate a faulty earth connection.

The next step in troubleshooting is to check all earth connections for cleanliness, corrosion and to see that they are firmly seated. If abnormalities are detected when checking the connections, replacing, repairing or cleaning the affected component can remedy the problem.

Once the cause of the fault has been rectified, delete the error memory and then carry out a test drive.

### **Please note**

Please always follow the repair instructions from the vehicle manufacturer when carrying out such work!

Reprinting, distribution, reproduction, exploitation in any form whatsoever or disclosure of the contents of this document, even in part, is prohibited unless our express permission has been obtained in writing beforehand and the source is stated. The schematic illustrations, pictures and descriptions are provided for explanatory purposes and are only intended as a visual supplement to the document text, so they cannot be used as the basis for installation or assembly work. All rights reserved.