



Mini F56 Cooper D - cruise control sporadically stops working

Data sheet	
Manufacturer	Mini
Vehicle model	F56 Cooper D
Engine	1.5 d
Year of manufacture	2014 - 2017
Symptoms	Cruise control error message
Recommended HGS tool	mega macs X

Important safety note

Cruise control stops working due to internal defects in the steering wheel coil spring

The cruise control in the above vehicle type may sporadically stop working. The reason for this fault may be an internal defect in the steering wheel coil spring.

There are ribbon cables in the coil spring that can break due to continual stress caused by turning the steering wheel. Depending on the position of the steering wheel, contact is briefly made or broken, which results in an error message. Contacting problems in the plug connections can also be the cause here.

Because this error is sporadic, it is difficult to detect the line break by measurement. If the above defect is present and no defect is found in the periphery of the speed control, replacing the winding spring can remedy the situation. In some cases, a steering wheel wiring harness must also be replaced. Please follow the vehicle manufacturer's repair instructions.

Once the cause of the fault has been rectified, delete the error memory then carry out a test drive.

Important

Please always observe the maintenance and repair notes provided by the vehicle manufacturer when carrying out such work and checks! As a fundamental principle, work on the airbag system must only be carried out by qualified specialised personnel. All legal and manufacturer-specific regulations must be observed.



Geschwindigkeitsregelung

**Aktive Geschwindigkeitsregelung ausgefallen.
Auf Abstand achten.
Von Ihrem Servicepartner prüfen lassen.**

Reprinting, distribution, reproduction, exploitation in any form whatsoever or disclosure of the contents of this document, even in part, is prohibited unless our express permission has been obtained in writing beforehand and the source is stated. The schematic illustrations, pictures and descriptions are provided for explanatory purposes and are only intended as a visual supplement to the document text, so they cannot be used as the basis for installation or assembly work. All rights reserved.