



Peugeot 206

All models with vehicle key without remote control

Vehicle cannot be started.

If there are complaints with these vehicles that the vehicle cannot be started, one possible cause is that the immobilizer has not been deactivated. In this case, the starter turns but the engine does not start. The fault is caused by the loss of the transponder chip required in order to deactivate the immobilizer. This chip is located in the plastic housing of the vehicle key, which can open due to poor gluing, leading to the chip falling out. When troubleshooting, the plastic housing should be opened carefully to check for the presence of the chip. If the transponder chip is no longer present, the vehicle key must be replaced.

In the course of series production, the gluing of the plastic housing was strengthened and the transponder chip was additionally stuck on.

Bulletin

