



## **Peugeot 206 1.1 and 1.4 litre Model year: from 2000**

**In the instrument cluster, “Stop” and the temperature control lamp are lit.  
Temperature display is at maximum.  
Engine fan runs at highest stage.  
No error stored in the error memory.**

If the above error occurs, this may be related to a partial failure of the two-stage fan control.

The fan control system consists of a fan motor, a protective resistor and two relays. The relays are controlled via the engine control unit.

In the case of a malfunction, the control unit switches to emergency operation and activates the highest fan stage.

We recommend the following procedure to check the function of all components:

- Connect diagnostic device
- Carry out actuator test of fan control
- Check components and periphery

**Practical tip:** If an individual fan stage fails, this could mean e.g. that the series resistor is faulty and triggers the above-mentioned fault.