Bulletin



© Hella KGaA Hueck & Co.,	20. Mai 2011	1-2
Lippstadt/Germany		

Citroen C1 Peugeot 107 All engines

Light source replacement

Light sources are replaced as follows:

Rearlight:

Position, stoplight, indicator, fog and back-up light:

- Turn the ignition off.
- Unscrew the fastening screws at the top and bottom of the rear lamp (size 10, see Fig. 1).
- The lamp is fixed to the body in two spots by ball elements (see Fig. 2).
- Press a rubber wedge carefully between body and lamp until the ball elements become loose from their brackets (see Fig. 3). **Caution!** Do not use a screwdriver for this. If there is too little pressure area or contact area, parts may break out of the light.
- Release the contact plug and remove it.
- Release the locking mechanism on the cover cap and take the cap off the light (see Fig. 4).
- Replace the respective bulb in the bulb carrier.

Refit all the removed parts in sensible order. Check the lighting system to make sure it is working.

Bulletin



Bulletin



© Hella KGaA Hueck & Co., 20. Mai 2011 2-2 Lippstadt/Germany



Fig. 1



Fig. 3



Fig. 2



Fig. 4



