



## **Fiat Stilo 1.6**

### **Bulb replacement**

In order to replace the bulb in the above-mentioned vehicle, proceed as follows:

#### **Passenger side:**

- Remove the attachment nuts from the water tank (see Fig. 1)
- Pull the water tank off the threaded bolt and push it towards the rear (see Fig. 2).
- Push the lock on the connecting plug sideways (see Fig. 3) and then remove the plug from the headlight.
- Push the safety hoop on the headlight cover sideways (see Fig. 4) and remove the cover.
- Replace the bulb.
- The bulbs for the parking light and main beam can now also be replaced easily.

#### **Driver side:**

- Unscrew the attachment screws from the battery cover and then remove these (see Fig. 5).
- Push the lock on the connecting plug sideways (see Fig. 6) and then remove the plug from the headlight.
- Push the safety hoop on the headlight cover sideways and remove the cover.
- Replace the bulb.
- The bulbs for the parking light and main beam can now also be replaced easily.

Replace the removed parts in a sensible order. Check the lighting system to make sure it is in perfect working order. Check the headlight setting and adjust if necessary.



Fig. 1

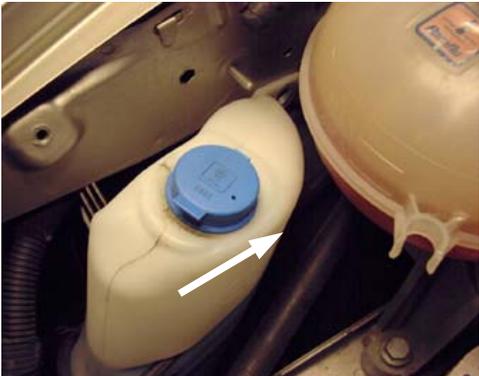


Fig. 2



Fig. 3

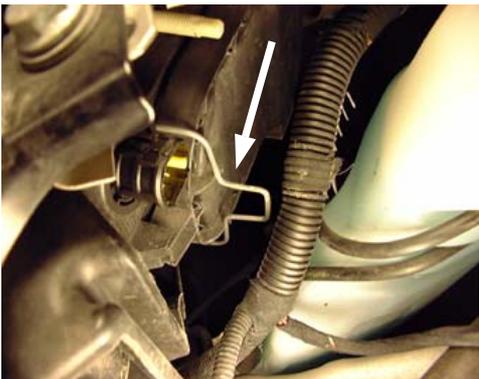


Fig. 4



Fig. 5

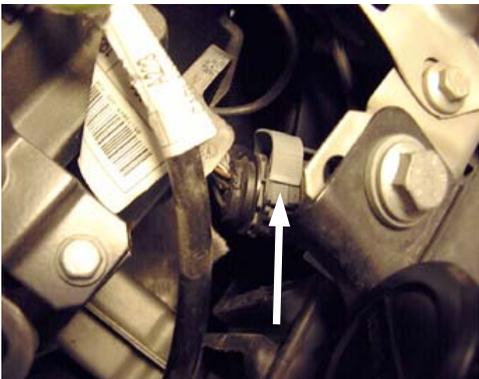


Fig. 6