



VW Bora

460 891-01/03/00

Montageanleitung

Mounting instructions

Instructions de montage









Monteringsanvisning


Montagehandleiding

Instrucciones de montaje

Istruzioni di montaggio

Asennusohjeet

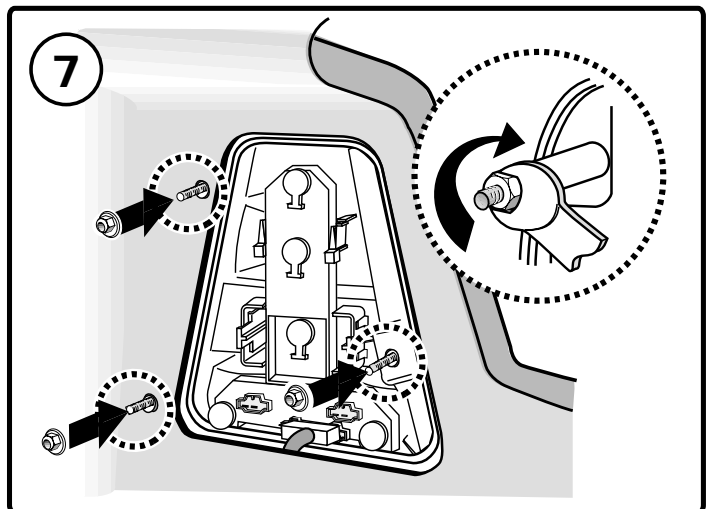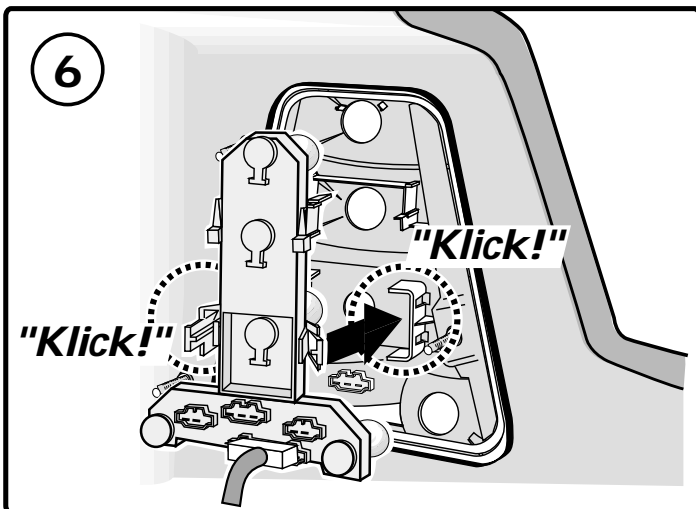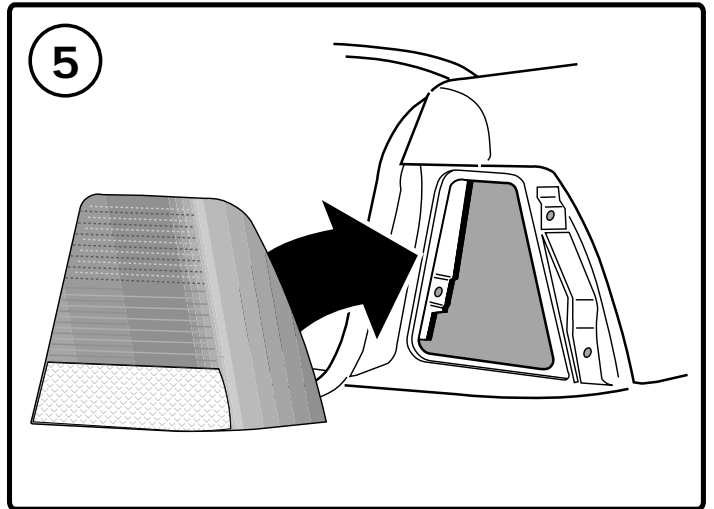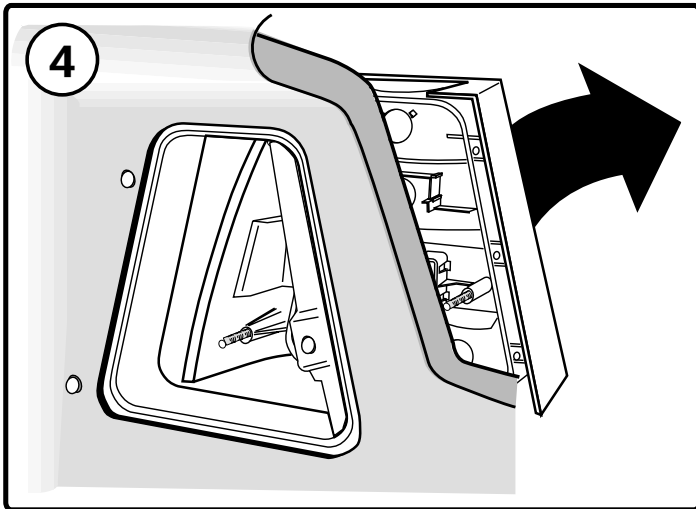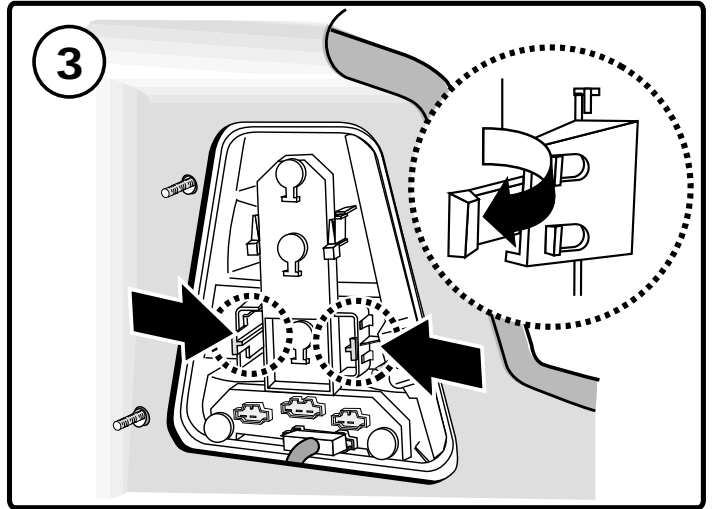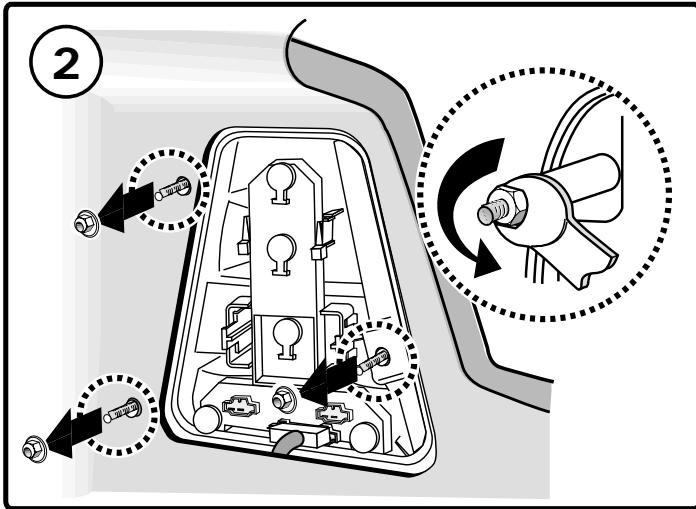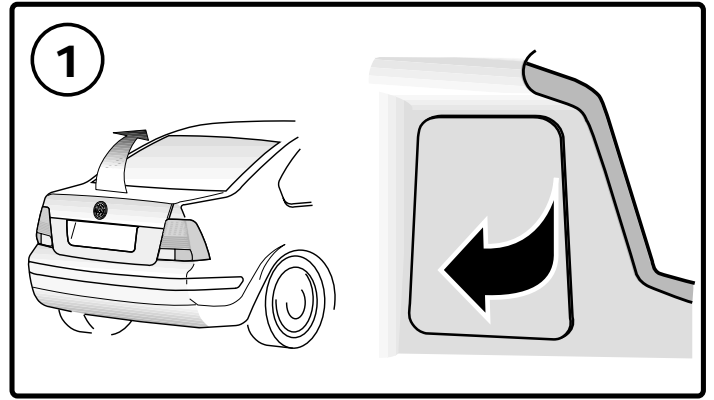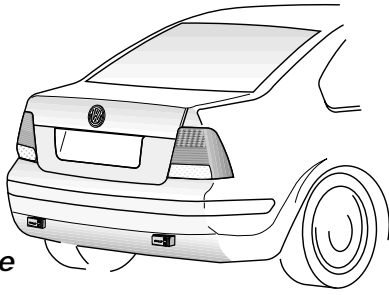

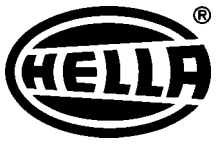

460 891-01/03/00

Montageanleitung

Mounting instructions

Instructions de montage

Monteringsanvisning

Montagehandleiding

Instrucciones de montaje

Istruzioni di montaggio

Asennusohjeet

