




VW Touran

Bulb replacement in combination rearlight


In order to replace the bulbs, the respective combination rearlight has to be removed.

To do this proceed as follows:

- Open the boot
- Insert the wire hoop (is included in the on-board tools) into the small bore hole in the trim of the combination rearlight, turn the hoop to the centre of the vehicle and pull the trim off about 1 cm in the direction of the arrow.

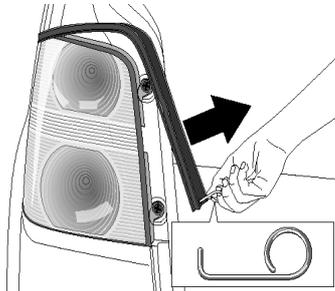


- Pull the trim down first, then up and off completely to the rear.

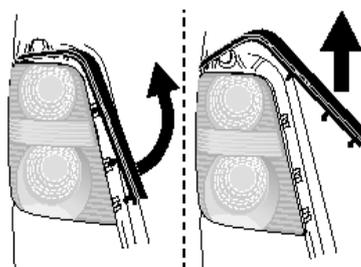




- Two screws become visible behind the trim, unscrew these with the aid of a screwdriver (is included in the on-board tools).

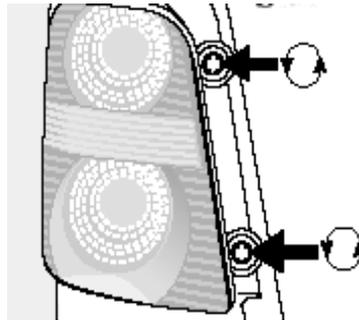

- Push the combination rearlight outwards slightly and remove it. The combination rearlight can now be accessed from the rear, and the bulb holder can be removed from the combination rearlight by pressing the lugs together.

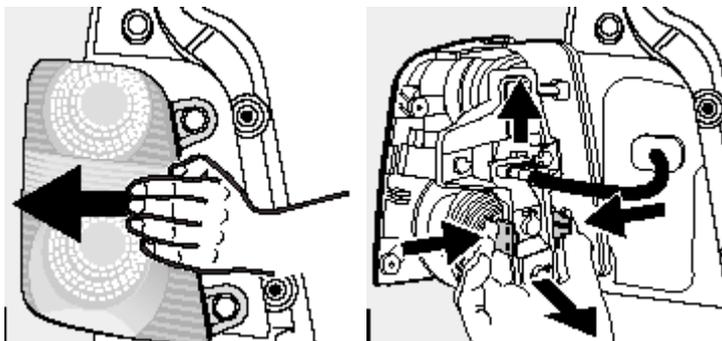

Important note: In the case of vehicles built up to 10/06, the ignition key has to be removed from the ignition lock once and then inserted again after bulb replacement, so that the bulb control system can be restarted and the new bulb detected. In the case of vehicles from model year 10/06 onwards, the procedure of removing and inserting the key after bulb replacement is no longer required.